



Torsion Axle Options


Bracket Mounting

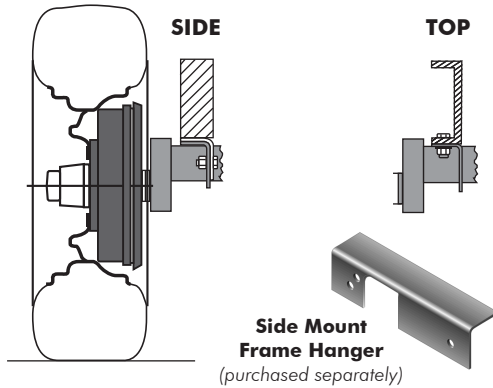


Bracket Orientation

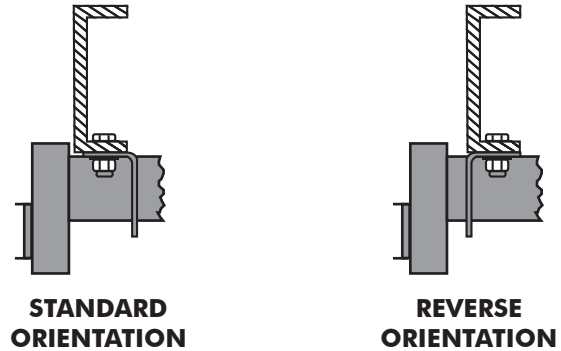

Bracket Profile

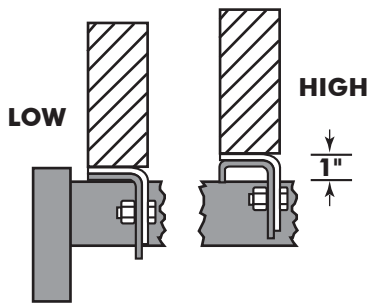


Overhang

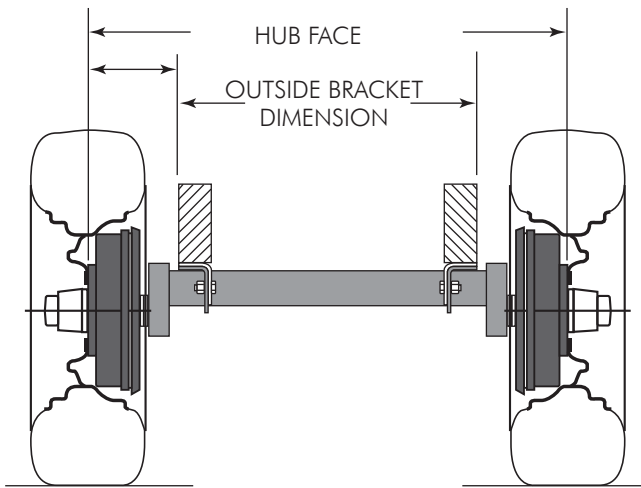


Overhang = Hub Face - Outside Bracket

Start Angle

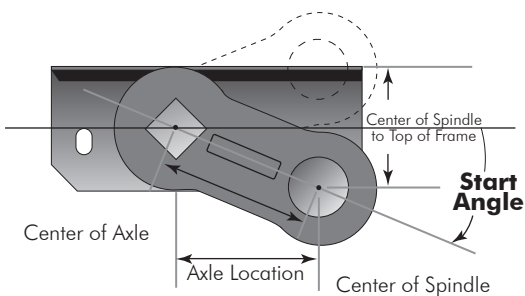

Start Angle (unloaded)

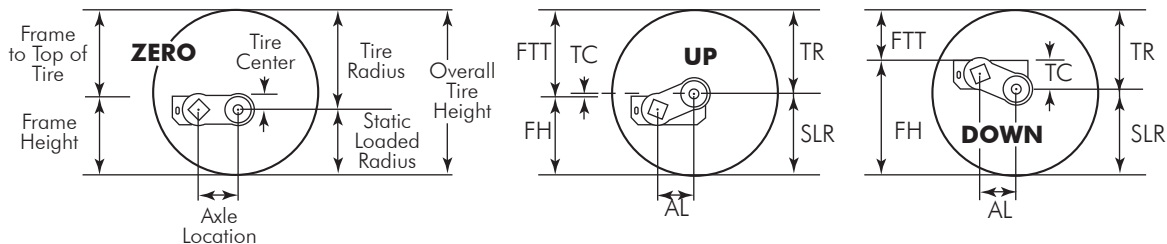

Information

Hubs and Axles

Brake Assemblies

Suspensions & Fasteners

Tires & Wheels

Couplers, Jacks & Winches

Hitches & Towing Accessories

Body Components

Boat Trailer Parts

Lights & Electrical

Locks & Cargo Control

Brake Actuating Systems

Switches