



Turbo Lube Replacement O-Ring Instructions

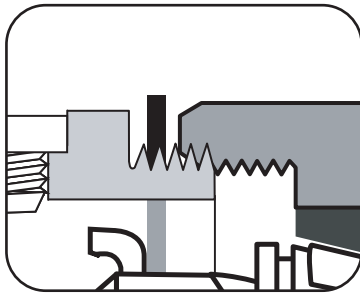

1

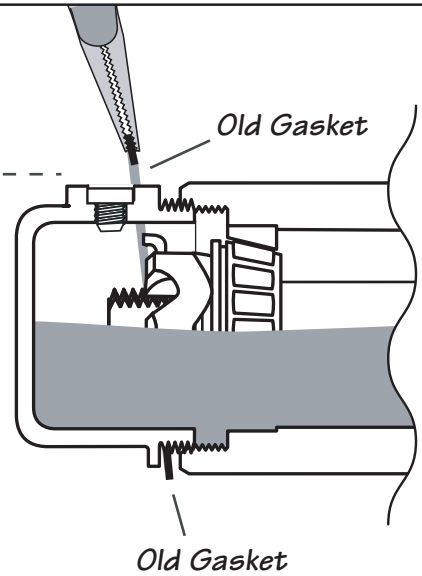


1. Unscrew cap several turns to allow space between cap and hub so that the gasket can be removed without any oil coming out of the hub. Use a pick or needle nose plier to remove the old gasket.

2. Stretch the new O-ring over the cap and in-between the cap and hub.

3. Hand tighten cap until snug. Use wrench to turn an addition 1/4 turn. Check to make sure the O-ring is seated properly. Be careful not to over tighten. Check oil level, fill if necessary. Tighten oil plug cap.

O-Ring

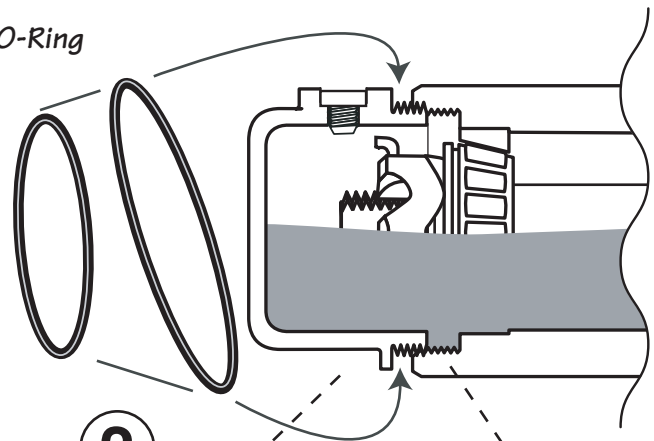

2

3

