

Information

Multi-Tow® Plug-In Simple® T-Connectors

Unplug your vehicle's factory wiring harness and plug in a vehicle wiring kit. That's how easy trailer wiring is with a Plug-In-Simple!® wiring kit, featuring OEM connectors for a perfect, weather-tight fit!

These kits provide a 4-wire flat connector for your trailer. Optional "pre-wired" 4-wire flat to 6-way round and 4-wire flat to 7-way RV blade round extension adapters to custom install the vehicle side wiring to most trailer combinations. Multi-Tow® Connectors give you the ability to tow trailers with different wiring connectors from the same vehicle connector. These connectors simply replace the 7-way connector that came with your vehicle.



Hubs and Axles

Brake Assemblies

Suspensions & Fasteners

Tires & Wheels

Couplers, Jacks & Winches

Hitches & Towing Accessories

Body Components

Boat Trailer Parts

Lights & Electrical

Locks & Cargo Control


Brake Actuating Systems

Switches



Part #40955

- 7 RV Blade to 4-Wire Flat Towing • Fits Standard 7 RV Blade Bracket

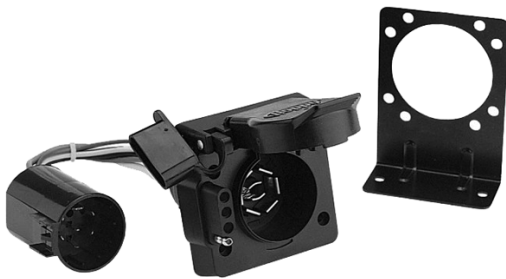

Ford / GM / Dodge Multi-Tow®

Ford / Lincoln / Mercury / Nissan / Infiniti / Kia / Audi

F-Series	1999-09	Navigator	1999-09
Expedition	1999-09	Mark LT	2006-08
Excursion	1999-05	Mountaineer	2002-09
Explorer	2002-09	Armada	2004-09
Explorer Sport Trac	2007-09	Titan	2004-09
Flex	2009	QX-56	2004-09
Vans	2004-09	Borrego	2009
Aviator	2003-06	Q7	2007-09

Chevy / GMC / Olds / Cadillac / Hummer / Buick / Isuzu / Saab


1500 Pickups	2003-09	Canyon	2008-09
2500/3500 Pickups	1999-09	Bravada	2002-04
Avalanche	2002-09	Escalade/EXT	2001-09
Tahoe	2000-09	H2/H2 SUT	2003-09
Trailblazer	2002-09	H3	2006-09
Suburban	2000-09	H3T	2009
Colorado	2008-09	Rainier	2004-07
Express Van	2003-09	Enclave	2008-09
Envoy	2000-09	Ascender	2004-08
Yukon/XL/Denali	2000-09	9-7X	2005-09
Acadia	2007-09		

Dodge / Chrysler / Jeep

Durango	2007-09	Ram 1500 Pickups	2009
Nitro	2007-09	Aspen	2007-09
Journey	2009	Liberty	2008-09

Part #42145

- 7 RV Blade to 4-Wire Flat Towing • Fits Standard 7 RV Blade Bracket

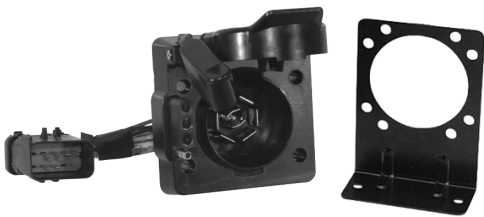


Dodge / Chrysler / Jeep / Mercedes / Mitsubishi Multi-Tow®

Ram 1500	2000-08	Pacifica	2003-08
Ram 2500/3500	2000-09	Commander	2006-09
Dakota	2000-09	Grand Cherokee	2000-09
Durango	2000-Early 07	Liberty	2005-07
Sprinter	2002-08	Wrangler	2004-09
Ram Van	2001-03	GL-Class	2009
Aspen	Early 07	Raider	2006-08

Part #43385

- 7 RV Blade to 4-Wire Flat Towing • Fits Standard 7 RV Blade Bracket

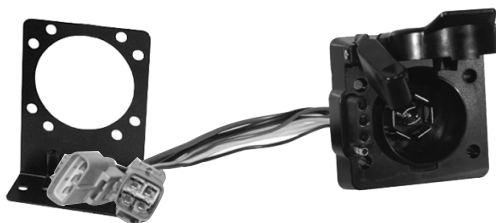

Toyota / Lexus Multi-Tow®

Tundra	2003-07	4-Runner	2004-09
Sequoia	2006-08	GX470	2004-09