




Hull Sav'r

22" Shock Absorbing Boat Guide Installation Instructions

Part #86104


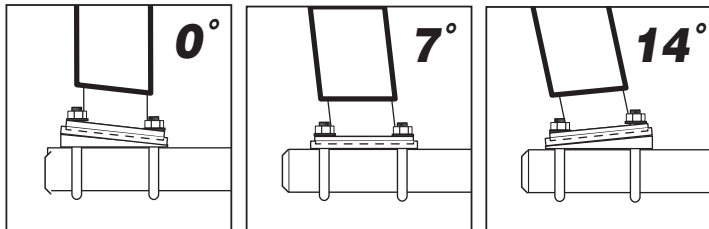


No Wedge Damper



Parts List

#	Part #	Description	Qty
1	44023A	Side Guide 22"	2
2	10623	Lock Nut 3/8"	16
3	10502	Flat Washer 3/8"	16
4	48362	PVC Guide	2
5	48364	Damper Wedge	2
6	48363	End Cap Small 2x2	2
7	83073Z	U-Bolt 3/8 x 2.19 x 3.5	4
8	44049	Horizontal Side Guide	2
9	48365	Side Mount Damper	2
10	83074Z	U-Bolt for 3" Frames (3/8 x 3-3/16 x 3-3/4)	4
11	83075Z	U-Bolt for 4" Frames (3/8 x 4-3/16 x 3-3/4)	4
12	48360	U-Bolt Protectors	8

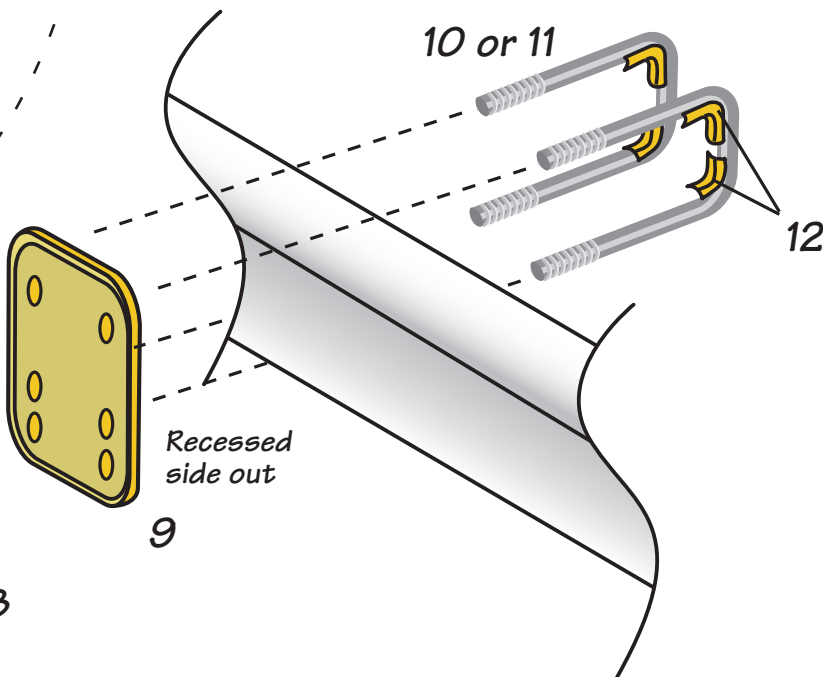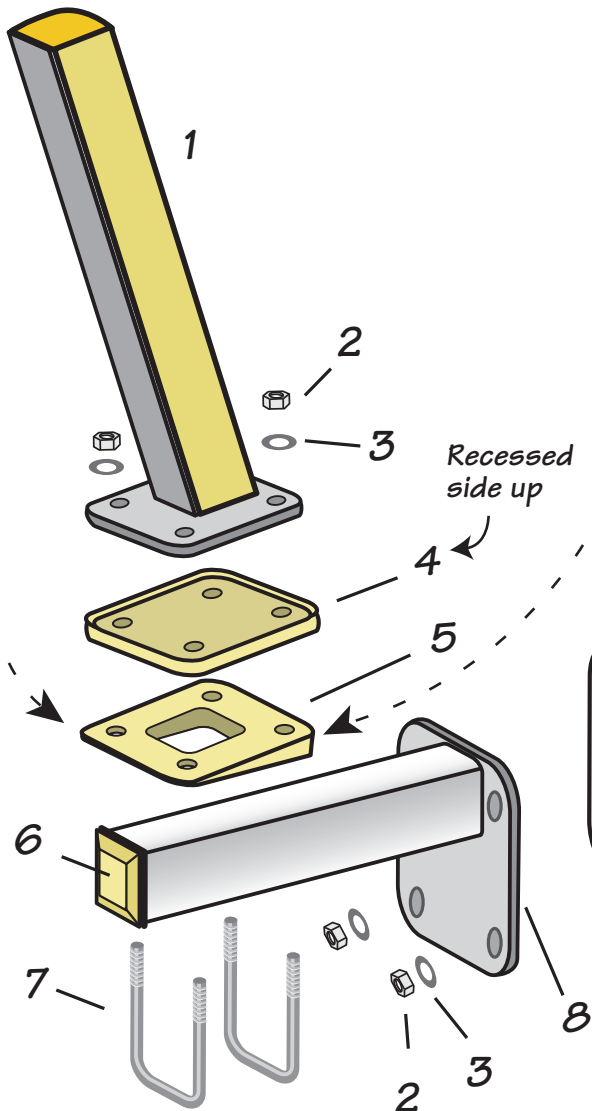

Part #15372

TIE DOWN ENGINEERING • 5901 Wheaton Drive • Atlanta GA, 30336
www.tiedown.com • (404) 344-0000 • FAX (404) 349-0401



041503,323